

## A simple guide to digital cameras



Please read me before using!  
Keep the manual and all related information for future reference

### Connect to an IDC application

Using the camera's built-in Wi-Fi allows you to operate the camera (take photos/videos) with ease  
To download photos/videos from the camera to your smartphone.

### Download the app and connect to the camera's Wi-Fi network


After the camera is turned on, press the menu key to enter the menu and then press the left/right button to switch to the submenu Up/Down key Locate (Wireless hotspot) and press the OK key to open the hotspot. The ID and password will be displayed on the camera screen  
Up on the curtain. Use your phone to scan the QR code on the camera screen to download the app.



Turn on your smartphone, tap Settings - WIFI to find the camera hotspot, and enter the corresponding password  
Note: The camera's hotspot does not have access to social network and is only used for smartphone access to the camera

### System requirements (smart phone):

- \* Requires Android 6.0 or higher
- \* Requires iOS 8.0 or later

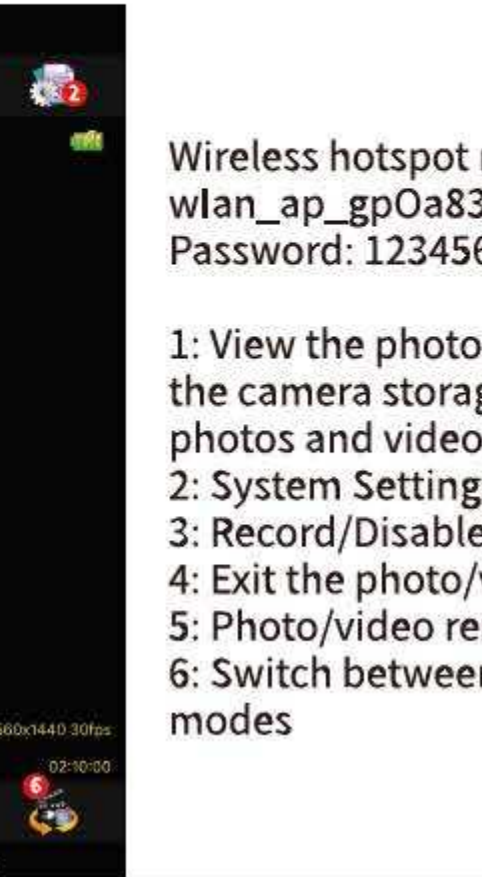

Wireless hotspot name:  
wlan\_ap\_gp0a83fd  
Password: 12345678

- 1: View the photos and views saved in the camera storage card Or download photos and videos to your phone
- 2: System Settings
- 3: Record/Disable recording Settings
- 4: Exit the photo/video screen
- 5: Photo/video remote button
- 6: Switch between camera and video modes

### warn

- To reduce the risk of fire or electrocution,
1. Do not expose the device to rain or moisture.
  2. Do not place liquid-filled objects (such as vases) on the equipment.
  3. Do not expose the camera to overheated environments, such as hot sun, fire, etc.

### Battery Precautions

1. Do not be exposed to high temperatures above 60°C(140°F), such as direct sunlight or in a car parked in the sun.
2. Do not burn or dispose of in fire.
3. When using an AC adapter/battery charger, use a nearby wall outlet. If anything goes wrong, unplug it from the wall socket. If you use a product with a charging light, be aware that the product will not be disconnected from the power supply even if the light goes out.
4. Do not use AC adapters/battery chargers in narrow spaces such as between walls and furniture.
5. If static or electromagnetic causes data transmission to be interrupted in the middle, restart the application or disconnect and reconnect the communication cable (USB, etc.).

### About the camera

#### System requirement

Users can transfer videos and photos to computers with the following configurations:  
Intel Pentium 2.0GHz or higher /Microsoft Windows XP or higher operating system 2GB RAM 40GB or more available disk memory/ standard USB interface /1GB GPU or higher 1920x1080 pixels or higher resolution.



- 1: T key/Magnify key
- 2: W Key/Shrink key
- 3: Power button/Return button
- 4: Up key
- 5: Right-click
- 6: Down key
- 7: Left/Menu key
- 8: OK key or confirm key
- 9: indicator light
- 10: microphone recording port
- 11: Lens
- 12: fill light
- 13: Tripod interface
- 14: reset key
- 15: lanyard position
- 16: Photo/Video button
- 17: Memory card slot
- 18: indicates a Type-C interface

| Button/indicator               | Feature  |
|--------------------------------|--|
| T key/magnify key              | Zoom amplification   |
| W key/shrink key               | Zoom reduction   |
| Power button/Return button     | Press and Hold - On/Off Short press - Return to photo or video mode              |
| Upper key                      | Switch menu items up in menu mode. Switch pictures or videos in Look back mode.  |
| Right button                   | In Photo/video mode, switch the flash mode.                                      |
| Down key                       | Enter Look back mode to view photos and videos. Select the menu to the right     |
| Left/menu key                  | Switch back and forth between camera mode and video mode. Menu down select       |
| OK key/Confirm key             | Enter the menu and exit the menu. Menu left                                      |
| Pilot lamp                     | In menu mode, select the specified menu item. In look back mode, play the video. |
| Microphone port                | Red charging indicator, blue power on indicator                                  |
| Lens                           | Record sound while recording   |
| Fill-in light                  | Fixed shot   |
| Tripod interface               | The machine freezes and restarts   |
| Reset key                      | Easy to carry and prevent loss   |
| Lanyard position               | Tap: Auto focus starts. Press: Camera/video starts                               |
| Photo/Video button             | Insert TF memory card  |
| Memory card slot               | Charge and connect the computer to read photos and videos                        |
| Type-C Indicates the interface |  |

### Charge the battery

You can use the included USB cable to charge the camera via the adapter (5V/1A~5V/2A).

- \* When the battery is charging, the charging indicator will light up red.
  - \* When the battery is fully charged, the charging indicator will automatically turn off.
- Normally, it takes about 2 hours for the battery to fully charge.

### Turn the camera on/off

Press and hold the power button and the camera will turn on automatically.



Press and Hold - On/Off Short press - Return to photo or video mode

### Set up the camera

You can customize the camera Settings.  
After the camera is turned on, press the menu button to open the menu Settings.



| submenu                | Menu content                                    |
|------------------------|---|
| Date/time              | Year/month/day hour/minute/second               |
| Automatic shutdown     | Off /1 minute /3 minutes /5 minutes /10 minutes |
| Prompt tone            | Off/On  |
| volume                 | 0/1/2/3/4/5/6/7/8                               |
| Language setting       | Simplified Chinese/Traditional Chinese/English  |
| Light source frequency | 50Hz/60Hz                                       |
| wifi Wireless hotspot  | Off/On  |
| formatting             | Cancel/confirm                                  |
| Default setting        | Cancel/confirm                                  |
| edition                | Product version number                          |

### Insert and format the memory card

A memory card with a speed of 10 or higher is recommended as normal.

1. Insert the memory card into the memory card slot until you hear a click.



2. Take out the memory card: Push the memory card in and the memory card will eject automatically.

### Formatted memory card

It is recommended to format the memory card before first use. Format the card and press the menu button to open the menu system. Then press the left or right button to switch to system Settings. Press the up or down key to find "Format" and then press the OK key to get the submenu. Select Format to format the memory card.



Note: If the file system in the memory card is not supported, the screen will pop up: "Unsupported file system, do you want to format?" Format the memory card as described above. Formatting the memory card will erase all data stored on it and the data will not be recovered. Save important data on PC before formatting.



- 1: Photo button (video start/end button)  
Press Start to record, then press End to record.
- 2: indicator light  
The work light blinks during recording.
- 3: Digital zoom button  
T digital zoom zoom /W digital zoom zoom zoom

### Focusing function

This feature includes three focusing modes: automatic focus/manual focus/prime focus. Press the menu button to open the menu, then press the left/right button to switch to the system setting, press the up/down key to find the "Video focus mode" and press the OK key to enter the focus mode. Select the mode you want.

### Automatic focusing

In this mode, you only need to keep the camera stable to take photos or video, and the camera will focus automatically. After the focus is completed, you can press the shoot button.

### Manual focus

In this mode, when taking a photo or recording a video, half press the shooting button, and the focus logo box will appear on the display until the camera focuses clearly. Then press the Shoot All button to take the best picture or start recording with the clearest picture.

### Fixed focus

In this mode, you need to keep half pressing the camera button to focus when taking pictures or recording. The screen will clearly display the picture of the object being photographed. Then press the camera button to the end. If you release the shoot button to take a photo or video, the resulting photos and videos are not clear.

### Fill-in light


Press the up key in video mode to quickly turn on or off the fill light. There are three flash modes of the fill light in photo mode, and you can quickly switch between the three modes by pressing the up key.



Note: When the fill light is in automatic flash mode, the fill light will only flash when taking pictures in dark environments. When switched to forced flash mode, the fill light will remain on.

### Media playback

Press the playback button to enter the media library. Select the video or photo file you want to view, then press the OK button to go to the appropriate file to view the videos and images stored on the camera's memory card.

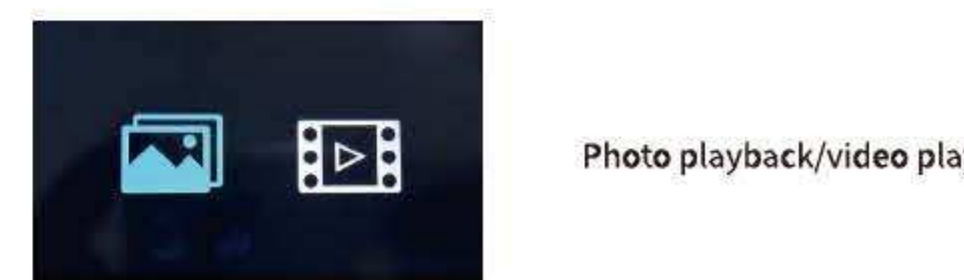

- 1: Press the Delete key to delete the picture/video  
Note: It cannot be restored after deletion
- 2: Press the OK key to play/pause the video
- 3: Press the playback key to exit the video/photo playback

### Connect to computer

1. Use the included USB cable to connect the Type-C USB port of the camera to the USB port of the computer.
2. The camera will turn on automatically and the screen will display the available options.



Press the up/down key to select the desired option, then press the OK key to confirm the Settings.

### Charging mode

Select the charging method, the camera can charge while recording normally. Turning the camera off will charge it more quickly than leaving it on.

### Storage mode

Select "Storage Mode", the computer will display the camera's memory card, on the computer you can transfer the stored files to the computer.

### webcam

Select "Webcam" mode, the camera can be used as a webcam, live broadcast, etc.  
Note: When the camera is used as a webcam, only the digital zoom button can be operated on the camera and no other functions can be used.

### Camera cleaning and maintenance

- (1) If the camera is not used for a long time, please place the camera in a dust-free, dry environment with a temperature not higher than 30 ° C.
- (2) In order to extend the service life of the battery, please completely discharge the battery before storage.
- (3) After the battery is fully charged, please discharge the battery completely at least once every 3 months.
- (4) If there is dust or dirt on the lens or screen, please wipe it gently with a clean, soft lens cloth.
- (5) Because this machine is a precision instrument, do not fall or be subjected to strong impact or vibration. Troubleshooting.

### troubleshooting

If you are having problems with your camera, see this section.

#### 1. The camera cannot be started

- (1) The camera battery is low, please charge the machine.

#### 2. The battery is not charged

- (1) The charging indicator light is not bright, and the charger is not plugged in. Please check whether the charger is properly connected
- (2) The ambient temperature is lower than 10 ° C, which may lead to slow or no charging.

#### 3. The camera crashes

Pressing the various buttons of the camera quickly may cause the camera to crash. After the crash, use a small needle to push down the reset key.  
Tip: Do not press the camera button quickly while the camera is recording or taking photos. Normally, the camera will display the waiting icon.

#### 4. Memory card is not recognized:

- (1) Please check whether the memory card conforms to the Micro TF card (class10), with a maximum of 256G
- (2) Please check whether the memory card is inserted backwards.

(3) When using the memory card on the camera for the first time, it is recommended to format it first.

### Supplementary statement

- (1) Do not insert anything except the memory card into the slot.
- (2) After turning on the power, the camera may appear unstable for a few seconds, which is not a fault
- (3) Due to the optical properties of the lens, there may be dispersion (chromatic aberration amplification) at the edge of the image. It's not a camera malfunction.
- (4) It is normal for the memory card to heat up after prolonged use.
- (5) It is normal for the camera screen to heat up after long use.

**FCC Caution**  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-Reorient or relocate the receiving antenna.  
-Increase the separation between the equipment and receiver.  
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.